



INTRODUCTION AND QUICK SETUP GUIDE

SyncRCVR Live Audio Receiver and Playout System



Synchronicity is deploying its SyncRCVR units to radio stations where there is a requirement for live program broadcast. SyncRCVRs are multi-channel playout devices that connect to the SyncDirect cloud-based platform, facilitating a live program distribution network with capabilities that far exceed the existing satellite platforms. Some of the SyncRCVR features are:


- Hands-off, fully managed playout system
- Configurable to provide multiple, simultaneous live studio quality (20-20Khz) analog or digital stereo or a mix of mono outputs
- Playout integrates any automation system to facilitate floating breaks and eliminate net-que trigger errors
- Dynamically mixes multiple tracks of live and pre-recorded elements to create programming totally customized to individual affiliates
- Pre-recorded (non-live) audio elements can be replaced up to 90 sec. before playout

SyncRCVR Setup

SyncRCVRs have been pre-configured by the Synchronicity team for true plug-and-play setup. Just like all Synchronicity services, the SyncRCVR and live programming network are fully managed 24/7 by the Synchronicity support team, and after set up, never require local station servicing.

Once power, network, and audio outputs are connected (see illustration pg 2), the SyncRCVR will automatically appear on the Synchronicity management dashboard and be ready for the final setup and testing. After you have connected the audio outputs and powered on, please call email or call Synchronicity Support so they can finalize the setup:

rcvr@synchronicity.co | (833) 377-6472

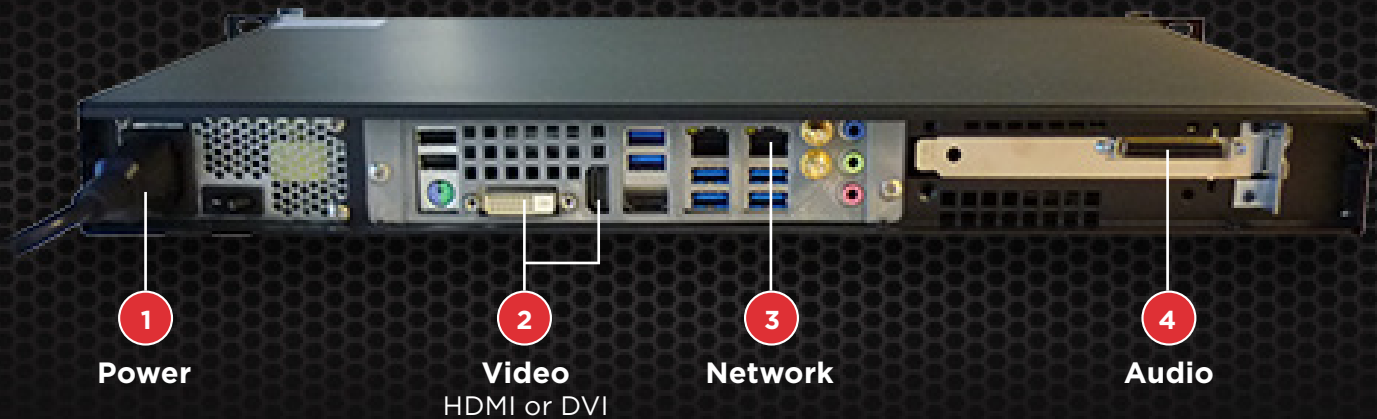

- 1 Plug the power cord into here
- 2 Video will be best quality out of the HDMI, but the DVI port can also be used
- 3 Network can plug into either Network port
- 4 Use the provided connector to plug into the audio card. The connector is shaped so it can only go in one way.

The audio is labeled. You will use 1 our L and R for the analog audio. Once the system is wired and on-line, call Synchronicity at **(833) 377-6472** to finalize installation. Don't add or change user accounts. Nothing else is to be installed in the system. If you have any questions at all, please do not hesitate to contact Synchronicity technical support.

Thank you,
The Synchronicity team